

SPCIT

DART AEROSPACE LTD		Work Order:	25998 AB
Description: <i>Outfit</i>		Part Number:	667 43001-A7
Dwg: <i>667 43001 Rev B</i>		Qty:	20 7
		Page of	

Step	Location	Procedure	By	Date	Qty
1	DC	Issue Traveler	LL	05.09.02	7 10
2	DC	<i>Part 667-Te 1750 x 1250/11</i>			
3	DC	<i>Wiring Patch: 17506 M18489</i>	ML	05.09.14	7
4	DC	<i>Logged parts as they come off the machine</i>	PL	05.09.15	7
5	DC	<i>Land check</i>	SD	05.09.11	4
6	DC	<i>Labors</i>	TR	05.09.15	7
7	DC	<i>Labors - Stock</i>	KL	05.09.21	7
8	DC	<i>Cost/Part 41.98</i>	54C	05.09.30	7
		<i>41.98</i>			
9	DC	<i>Close up/o</i>			
		<i>Land st.</i>			
5b	QCS	Inspect level 5	QD	05/09/30	7

Rev	Date	Change	Revised By	Approved






①
-1.97 OUTER TUBE
MATERIAL: 1.75 OD X .065 WALL, 6061-T6
SCALE: 0.250



①
-2.05 OUTER TUBE
MATERIAL: 1.75 OD X .065 WALL, 6061-T6
SCALE: 0.250

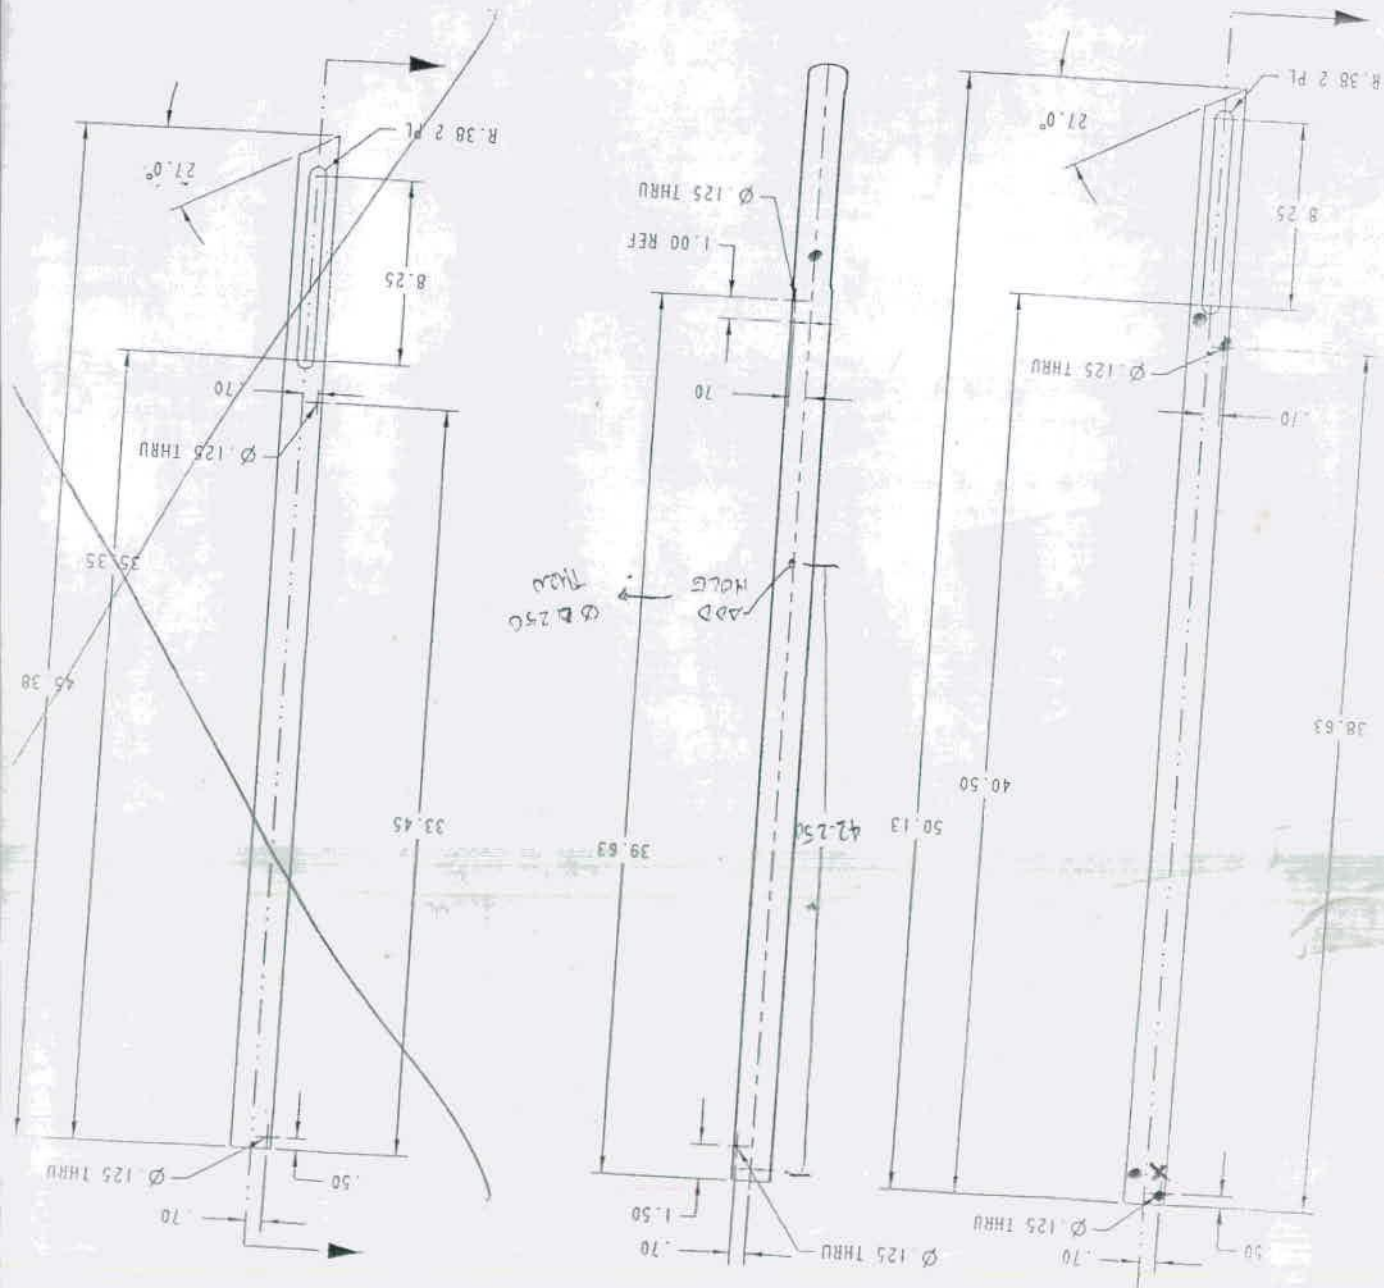

1. 1. 1.

1. 1. 1.

1. 1. 1.

1. 1. 1.

1. 1. 1.

1. 1. 1.